


# Programming Data Guide for AIS Plotter

How to program AIS data (own vessel information) for Onwa AIS plotter


- 1 Select MMSI setup in MAIN MENU-> SETUP -> MMSI setup as shown below:

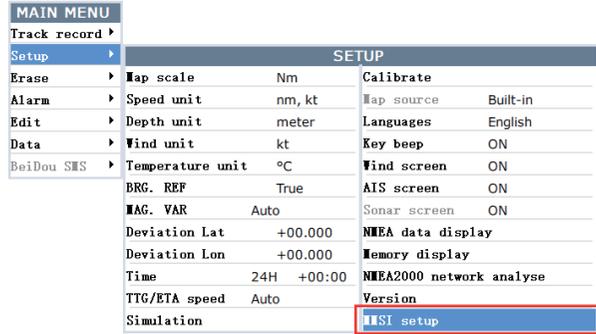


- 2 Enter password (default is "000000") and scroll the cursor to [ENT] as shown then press [ENT] key to confirm:




- 3 The below AIS SETUP window will pop up as shown:

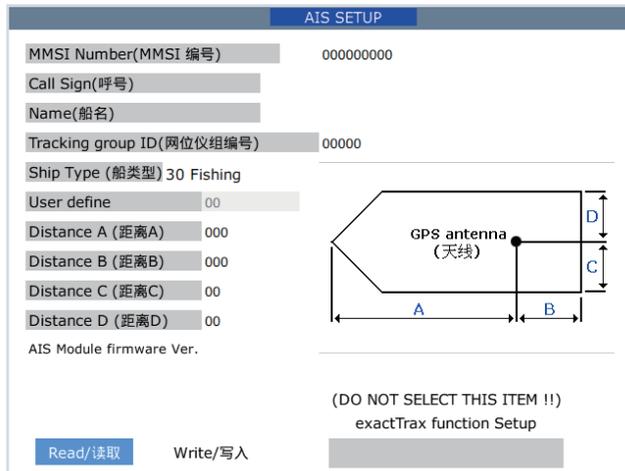

- 4 Scroll the cursor to [Read] and press [ENT] key to read the stored information (MMSI, Call Sign, Name and AIS Module firmware ver. ) from the preset memory.

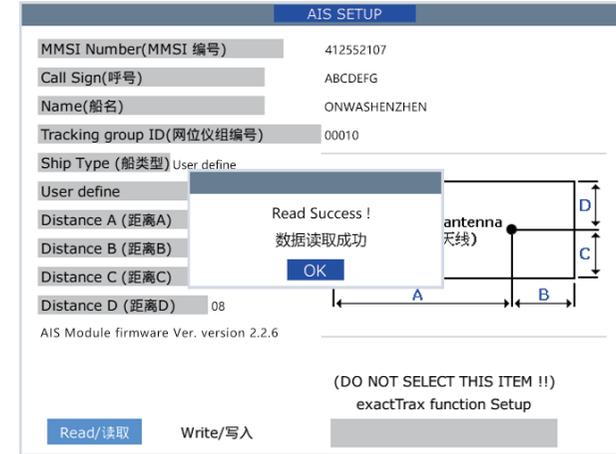


- 5 Change the information by combination of [arrow keys] and [ENT] according to actual data of your boat, MMSI, boat's name, Ship type, boat size etc.

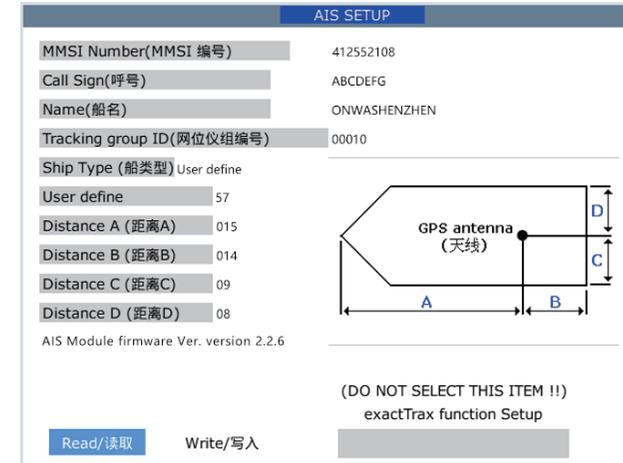

**Notice:**

When editing AIS data, note that the Call Sign and Name cannot contain lowercase letters.

6 Scroll the cursor to [Write] after you finish editing and press [ENT] key to save the changes.

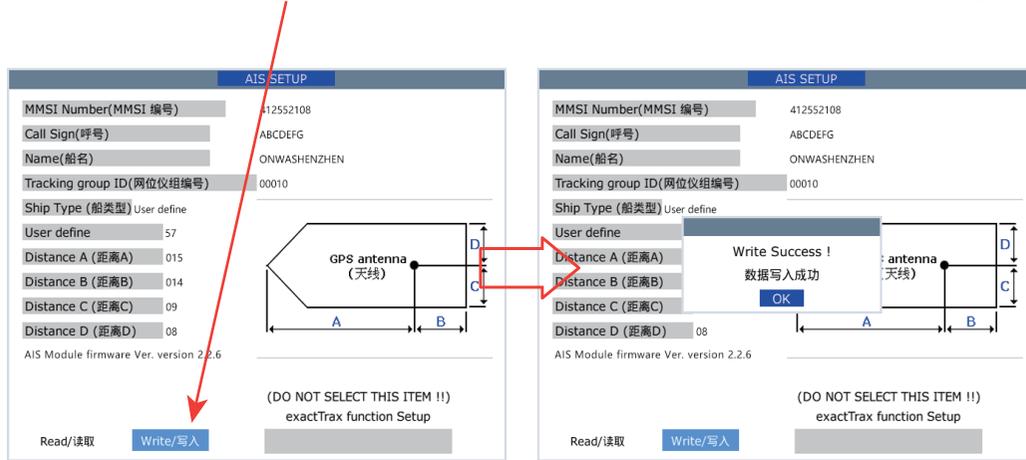


**Notice:**

Ignore the Tracking Group ID if you do not need to use the plotter with the ONWA AIS tracking buoy.

7 Now you can press [ESC] key to exit the AIS setup. You can check the saved AIS setup information by the following steps:

7.1 Select AIS screen and press [Menu] -> AIS detail list.

You can also press the [MOB] key briefly to open the AIS detail list.

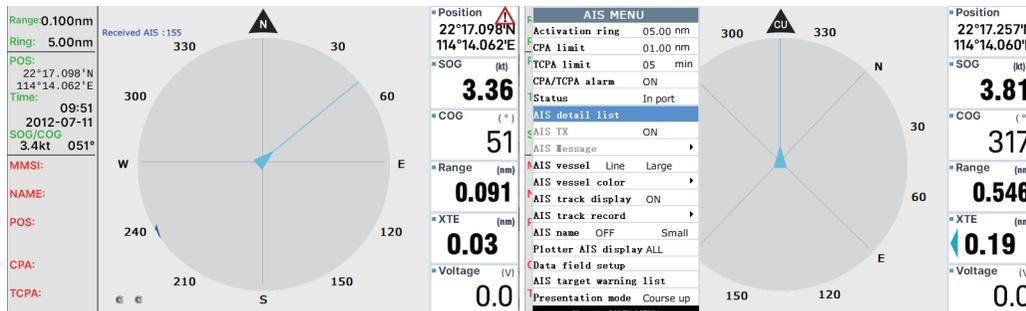

7.2 Select "000" from the list and press [ENT] to check the saved AIS setup information.

| No. | MMSI      | NAME                 | DIST  | COG | NAME           | CLASS            |
|-----|-----------|----------------------|-------|-----|----------------|------------------|
| 000 | 412552108 | ONWASHENZHEN         | 0.027 | 302 | MMSI 412552108 | CLASS B          |
| 001 | 412102684 | ONWA84               | 0.240 | 0   | COUNTRY        |                  |
| 002 | 808663857 | 6P4J2) ASM18D-4?*)1; | 0.276 | 0   | SHIP-TYPE      | User define      |
| 003 | 100710991 |                      | 0.281 | 290 | IMO NO         | ***              |
| 004 | 009010120 | ONWA10120            | 0.296 | 0   | CALL SIGN      | ABCDEFG          |
| 005 | 413902904 | YUE GUANGHAI HUO8318 | 0.293 | 319 | LAT            | 22°17.300'N      |
| 006 | 413467050 | JIA-XIN-858          | 0.343 | 0   | LONG           | 114°14.008'E     |
| 007 | 009102217 | ONWA217              | 0.331 | *** | COG            | 302° SOG 4.200kt |
| 008 | 009103057 | ONWA1057             | 0.343 | 0   | RNG            | 0.03nm BRG 113°  |
| 009 | 009102242 | ONWA242              | 0.350 | 183 | CPA            | 0.03nm TCPA 0.1  |
| 010 | 009010623 | TUNG HO 8            | 0.345 | 0   | LENGTH         | 029 BEAM 017     |
| 011 | 009010193 | ONWA10193            | 0.396 | 0   | DRAUGHT        | ***              |
|     |           |                      |       |     | DEST           |                  |
|     |           |                      |       |     | ETA            | ***              |

| No. | NAME      | ONWASHENZHEN | CLASS   |
|-----|-----------|--------------|---------|
| 000 | COUNTRY   |              | CLASS B |
| 001 | SHIP-TYPE | User define  |         |
| 002 | MMSI      | 412552108    |         |
| 003 | CALL SIGN | ABCDEFG      |         |
| 004 | 100       |              |         |
| 005 | POS       | 22°17.307'N  | 07°N    |
| 006 | 413       | 114°13.936'E | 36°E    |
| 007 | COG       | 254.1        | 4.100kt |
| 008 | SOG       | 4.1          | 72°     |
| 009 | CPA       | ***          | ***     |
| 010 | TCPA      | ***          | 015     |
| 011 | RNG       | 0.0          |         |
|     | BRG       | 72.8         |         |

**Notice:**

- Enter "Tracking group ID" if necessary to use with Onwa AIS buoy with programmed to send "Onwa protocol".
- Please notice that the "Tracking group ID" must be same as the "Tracking group ID" programmed in Onwa AIS buoys otherwise the AIS buoys could not be displayed on your AIS plotter.